

POINTING DEVICE
115

PORTABLE
TELEPHONE
100

F i g . 1 (b)

ANTENNA
111

MAIN BODY
PART
110

AUXILIARY 113
DISPLAY
PART

MICROPHONE
122

DISPLAY
SURFACE
121

111 ANTENNA

112 SPEAKER

116
ANSWER
BUTTON

114
INPUT
PART

130
HINGED PART

MAIN SCREEN
120 DISPLAY PART

100

F i g . 1 (a)

111 ANTENNA

112 SPEAKER

116 ANSWER BUTTON

122
MICROPHONE

F i g . 1 (c)

100

Fig. 2
(a)


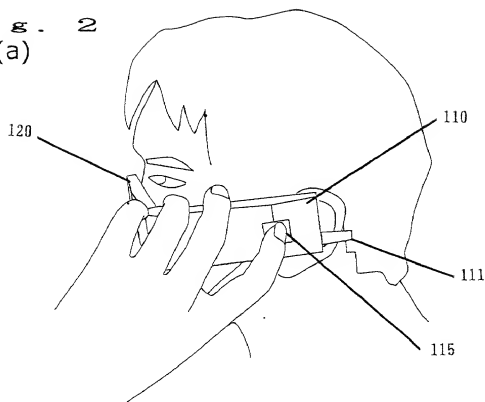 


Fig. 2
(b)

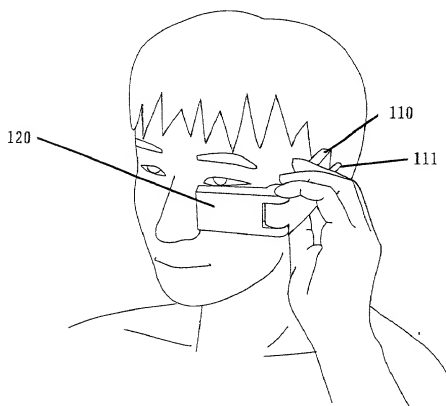 

POINTING DEVICE
115

ANTENNA
111

100

F i g . 3 (b)

MAIN BODY
PART 110

AUXILIARY
DISPLAY
PART 113

111 ANTENNA

112 SPEAKER

116
ANSWER
BUTTON

100

114
INPUT PART

122
MICROPHONE

130
HINGED PART

121
DISPLAY SURFACE

SECOND HINGE
131

MAIN SCREEN
DISPLAY PART
120

F i g . 3 (a)

111 ANTENNA

112 SPEAKER

116 ANSWER BUTTON

100

122 MICROPHONE

F i g . 3 (c)

Fig. 4(a)

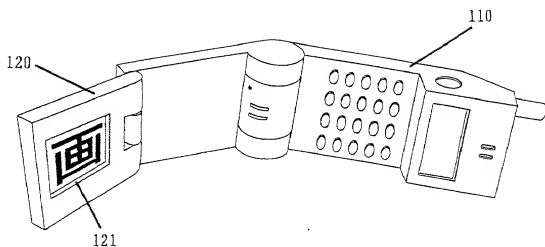 


Fig. 4(b)



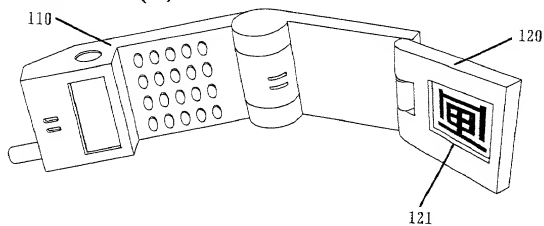 



Fig. 4(c)

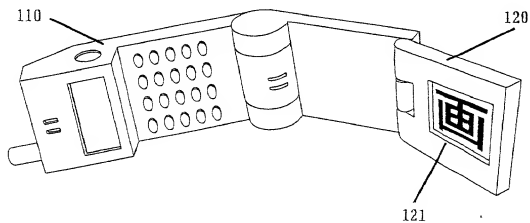 


F i g . 5

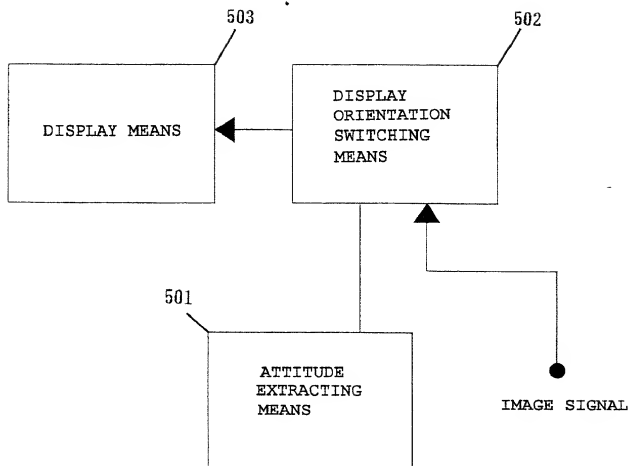 


F i g . 6 (a)

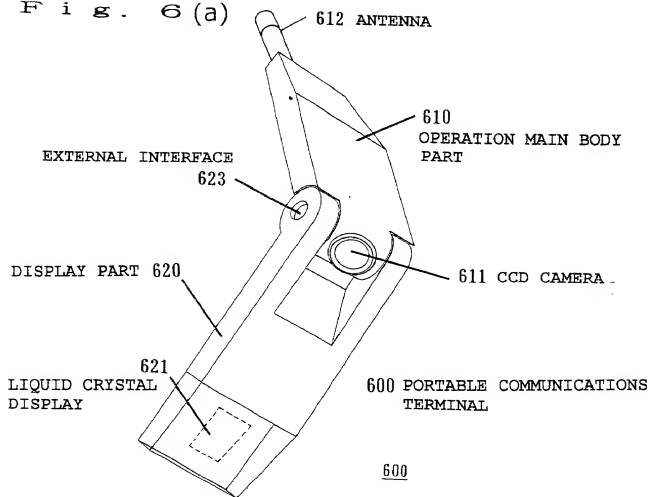 


F i g . 6(b)

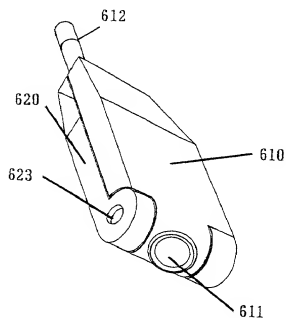 


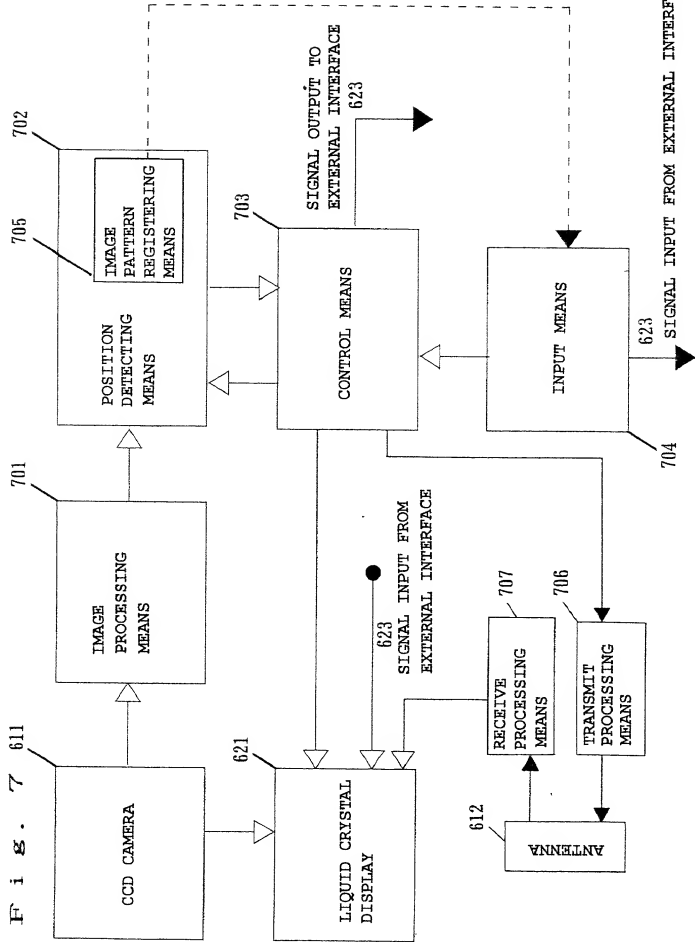 


F i g . 8

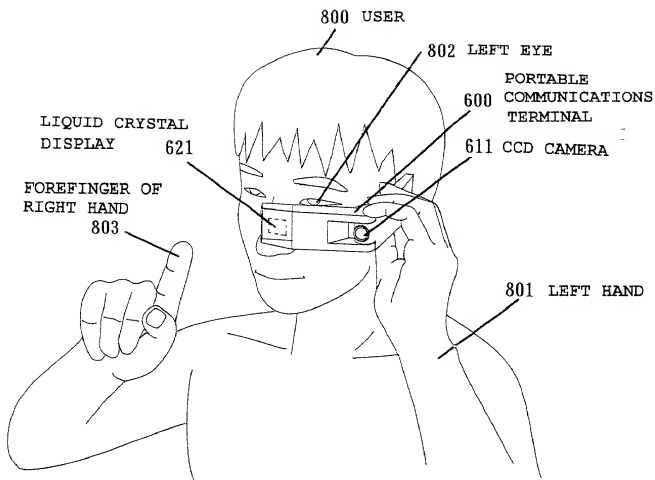 


F i g . 9 (a)

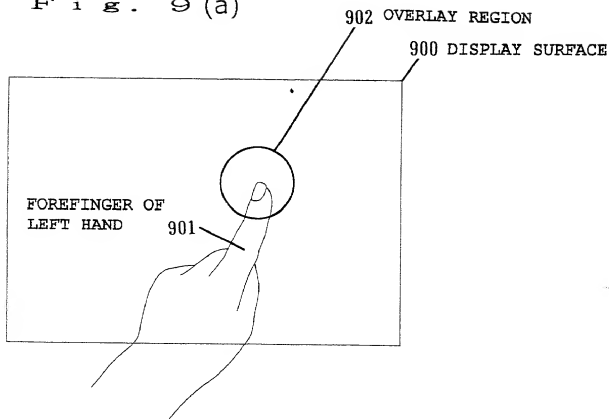 


F i g . 9 (b)

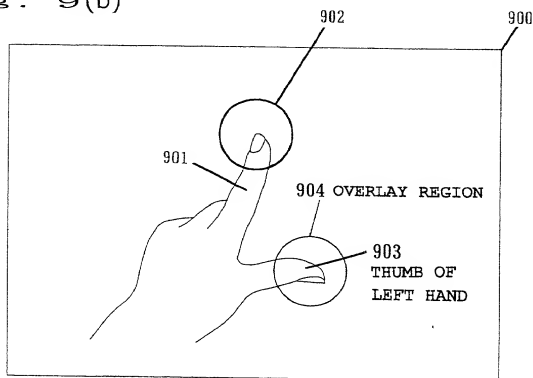 


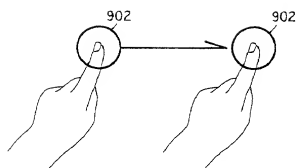 


F i g . 1 0
(a)

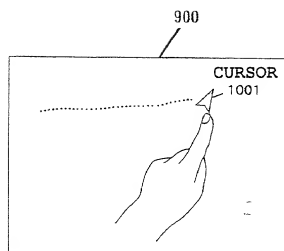 

F i g . 1 0
(b)

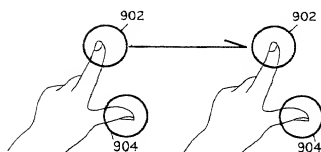 

F i g . 1 0
(c)

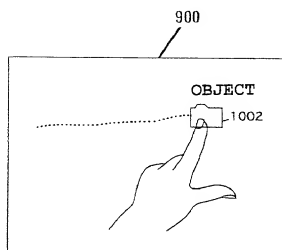 

F i g . 1 0
(d)

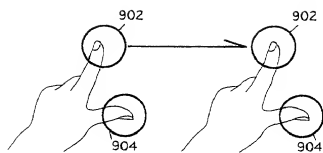 


Fig. 13
(a)

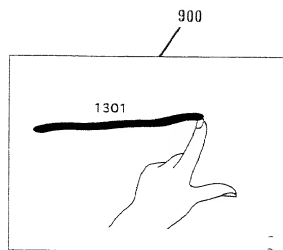 


Fig. 13
(b)

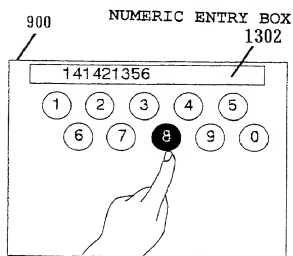 


Fig. 13
(c)




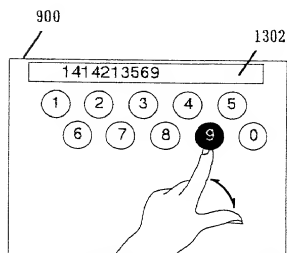 


Fig. 13
(d)

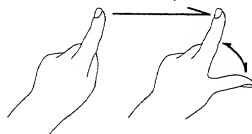 

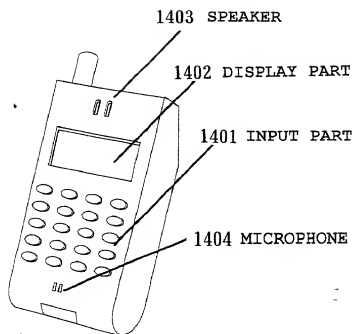 

F i g . 1 4
(a)

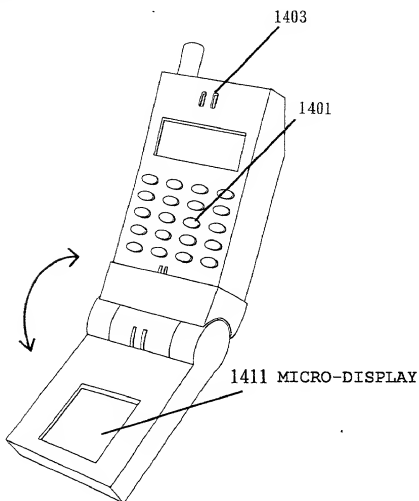 

F i g . 1 4
(b)

09241397-030204
702020-26212380

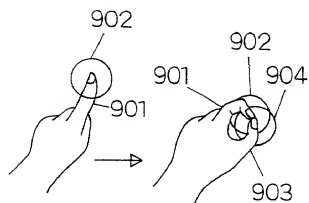 


Fig. 15
(a)

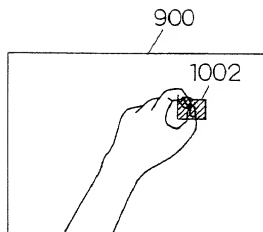 


Fig. 15
(b)

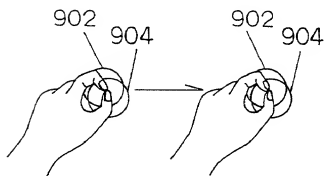 


Fig. 15
(c)

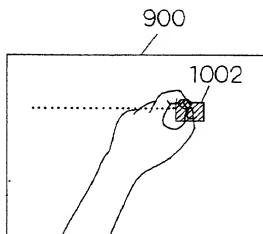 


Fig. 15
(d)

Fig. 16
(a)

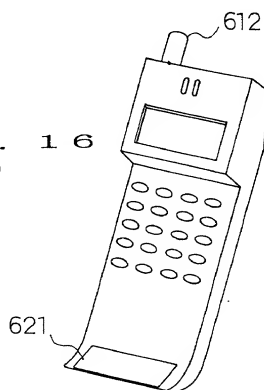 


Fig. 16
(b)

